



Combat Fighting Sling

Instructions for Sling 101 Assembly on Fixed Buttstocks (M-16)

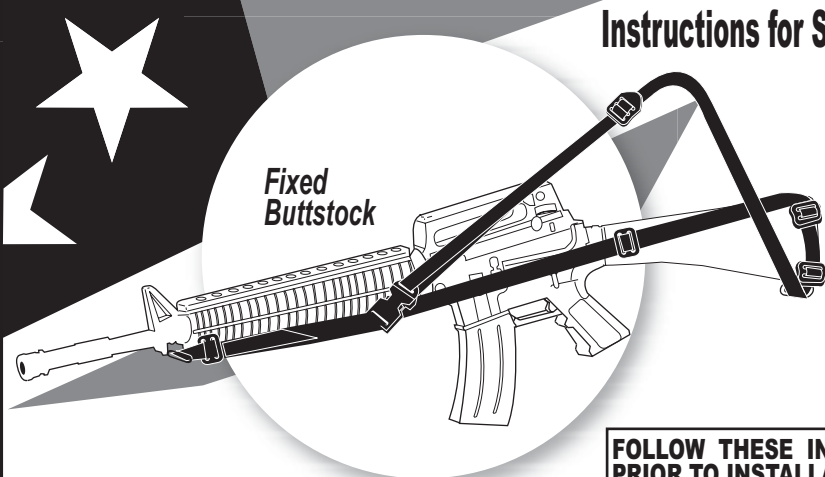

ASSEMBLY PARTS LIST


WORKS FOR EITHER SIDE OR BOTTOM SLING SWIVELS

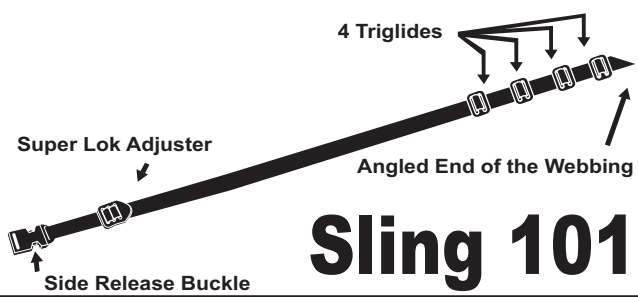


Sling 101

FOLLOW THESE INSTRUCTIONS STEP BY STEP TO INSTALL THE SLING 101. PRIOR TO INSTALLATION, REMOVE ALL THE TRIGLIDES FROM THE SLING 101. THEN FOLLOW STEPS 1 THROUGH 6 UNTIL YOU FINISH THIS SIMPLE PROCESS.
***NOTE: FIXED BUTTSTOCK RIFLES REQUIRE THE USE OF ALL 4 TRIGLIDES.**


1 **Fixed Buttstock:** Insert the angled end of the webbing through the back attachment point. Now insert the angled end of the webbing through two of the triglides. For correct assembly, the distance between the angled end of the webbing and the triglides must be at least 4ft (48"). The distance between the top and bottom triglides must be 3".

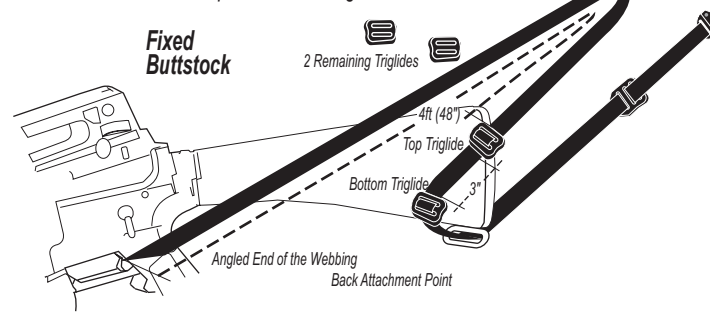


2 **Fixed Buttstock:** Wrap the webbing up and around the fixed buttstock. Insert the angled end of the webbing through the back attachment point. Now insert it through the two triglides installed in step 1. The angled end of the webbing must be long enough to pass the front attachment point by at least 3 inches.

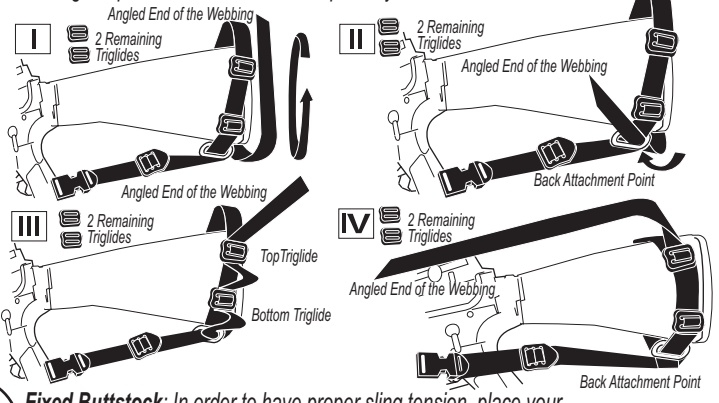


3 **Fixed Buttstock:** Insert the angled end of the webbing through another triglide. Next, insert the angled end through the side release buckle. Finally insert the angled end through the last triglide.

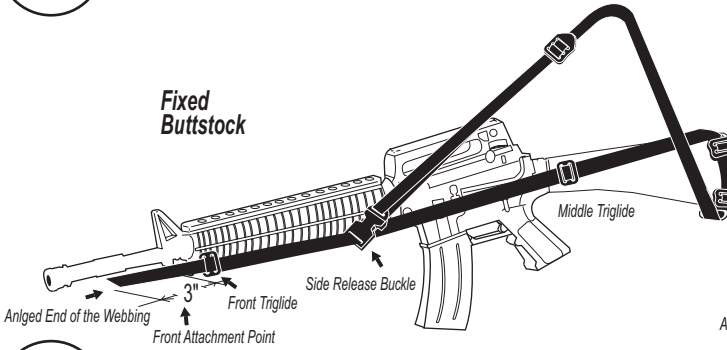

4 **Fixed Buttstock:** In order to have proper sling tension, place your fist between the sling and the rifle, as shown, and insert the angled end of the webbing through the front attachment point of the rifle.

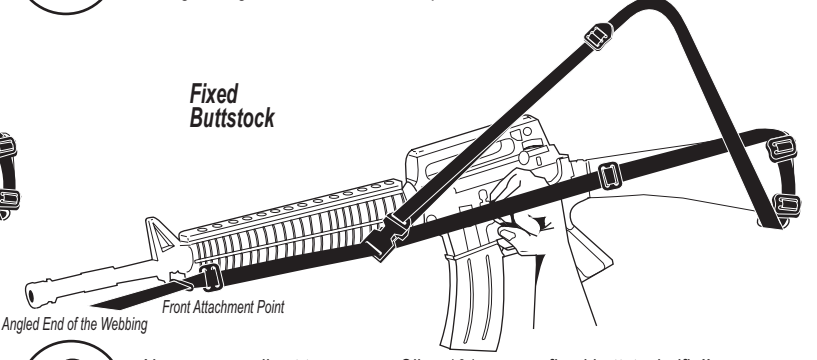

5 **Fixed Buttstock:** Back loop the angled end of the webbing through the front triglide. Adjust the middle triglide to modify the distance that the side release buckle will move along the sling.

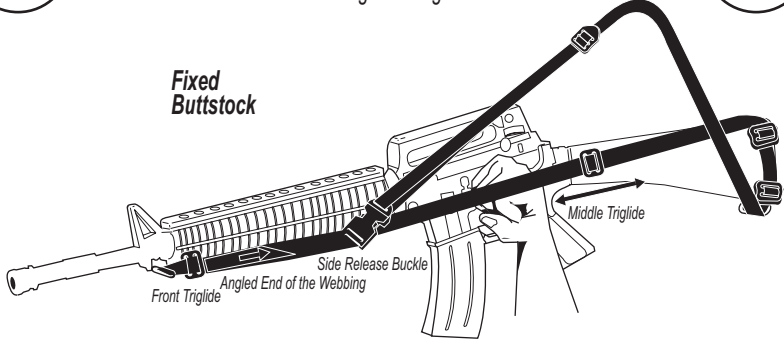

6 Now you are all set to use your Sling 101 on your fixed buttstock rifle!!

